

# WELL&GOOD™

keep your pet well, for good

## CORDLESS NAIL GRINDER

### INSTRUCTION MANUAL

#### For Well & Good Model WGN01 & WGN02

Regular nail trimming, recommended every 3 to 4 weeks, is essential to keeping your pet's paws, legs, and hips healthy and comfortable. Utilizing a nail grinder can help you achieve smooth, rounded edges that are not possible with traditional scissors or clippers—and it is an essential grooming tool for large pets with very thick nails.

The **WELL & GOOD CORDLESS NAIL GRINDER** offers professional-grade results at home, designed to meet the highest standards of performance for safely and efficiently cleaning, grooming and trimming pet nails. Although your Nail Grinder has been thoroughly tested and inspected at every stage of its manufacturing and assembly, it is recommended that you clean and maintain it as instructed in this manual. This will ensure optimum performance and maximum life of the Nail Grinder.

#### **IMPORTANT: RETAIN THESE DIRECTIONS**

**Distributed by: International Pet Supplies and Distribution, Inc., San Diego, CA 92127**

© 2022 Petco Animal Supplies, Inc. All Rights Reserved. 3498220, 3495740

Made Responsibly in China. Contact us at **1.855.FAQ.Petco**



**WARNING:** When using electric appliances, basic precautions should always be followed, including the following:

1. Read all the instructions before using the appliance.
2. To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
3. Do not touch moving parts.
4. Use only with the Sanding Drum attachment recommended or sold by Well & Good™.
5. Avoid water. Do not submerge.
6. Do not operate the Nail Grinder if it is damaged in any manner.
7. Keep out of reach of children to avoid misuse.
8. With the exception of replacing the Sanding Drum / Mandrel, this Nail Grinder does not have user-serviceable parts. Any maintenance not explained in this manual should not be performed by the user.
9. Do not mix old and new batteries. Do not mix different brands or types of batteries. Do not mix alkaline batteries, carbon zinc or rechargeable batteries. Do not dispose of in fire, as batteries may leak or explode.

 
## Before You Begin

Tips for using this Nail Grinder

- Turn on the Nail Grinder prior to use to make sure your pet is comfortable with the sound of the unit.
- Trimming pet's nails using this Nail Grinder requires two hands. If pet requires restraint, it may be helpful to have assistance.
- Always keep hair away from spinning parts. If hair is accidentally caught in spinning drum, immediately turn power OFF and untangle hair.
- When grinding around a furry paw pad, brush coat up and hold it out of the way of the Sanding Drum. You can also use a piece of gauze to isolate the nail, keeping longer hair out of the way.
- For excessively long nails, first cut off tip with manual nail trimmer, then grind.



# Getting To Know Your Nail Grinder

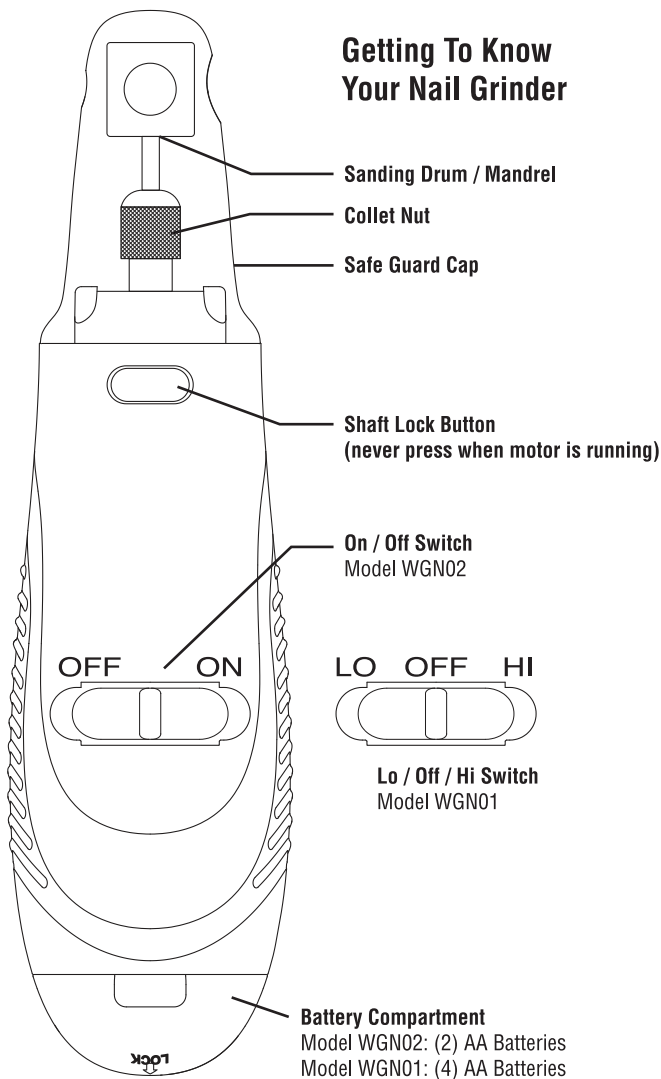




## Get Nail Grinder Ready


1. To open battery compartment door, press the “Push” button on the bottom of the nail grinder, then lift up on the “Lock” button.
2. Install batteries **following the (+) (-) markings**:  
Model WGN02: Two(2) 1.5V AA Batteries  
Model WGN01: Four(4) 1.5V AA Batteries
3. Close and lock the battery compartment by holding the compartment door down and pushing the “Lock” button back, in the direction of the arrow.
4. Turn it ON by moving switch to the “On” indicator.  
For Model WGN01 only: Select the “Lo” setting for small dogs and cats under 20 LB. Select the “Hi” setting for dogs over 20 LB.

## Trim Pet's Nails

1. Extract and further expose your pet's nail by gently squeezing the nail between the thumb and pointer finger. (Figure 1)
2. Insert a nail into the matching size hole in the Safe Guard Cap. **CAUTION:** Always operate Nail Grinder with Safe Guard Cap in place. Using the Nail Grinder without the Safe Guard Cap can cause injury or damage to unprotected areas. (Figure 2)
3. Gently start grinding from the nail tip, holding the Nail Grinder firmly without applying excessive force. Continue up and over nails in a steady upward

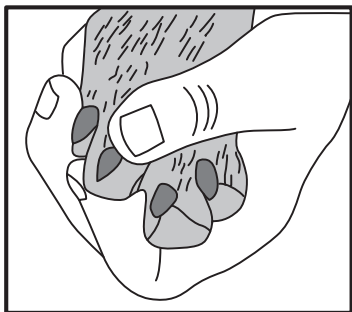 

**Figure 1**

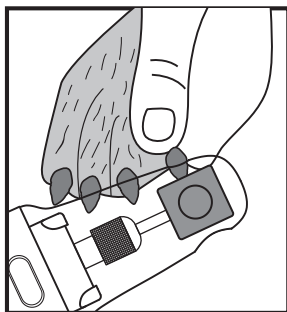 

**Figure 2**




motion to ensure smooth edge, for no more than 2-4 seconds at a time, alternating between nails. (Figure 3)

Take your time when grinding the nail, removing a little bit with each pass rather than finishing each nail trim in one movement. Continue to grind over edges of nails to remove any roughness.

Stop grinding when you get close to the “quick” (bloodline in nail). You will see the quick begin to appear when you look at the nail head on.

4. Turn Nail Grinder off by sliding switch to the OFF position.

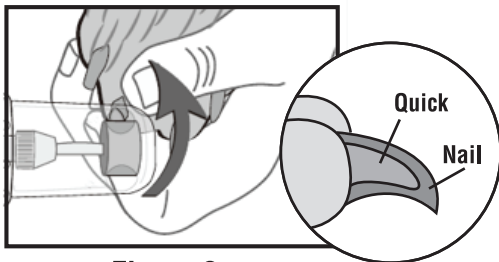 

**Figure 3**

## **Replacing the Sanding Drum / Mandrel**

1. Slide the Nail Grinder Switch to "Off" and remove the batteries.
2. Remove the Safe Guard Cap from the Nail Grinder.
3. Press and hold down the Shaft Lock Button, then simultaneously turn the Collet Nut counter-clockwise to loosen.
4. Pull up on the Sanding Drum / Mandrel to remove.  
Insert a new Well & Good™ Sanding Drum / Mandrel.
5. Press and hold down the Shaft Lock Button, then simultaneously turn the Collet Nut clockwise to tighten.
6. Replace the Safe Guard Cap on the Nail Grinder.



# Care & Maintenance

**Inspect regularly before use, and discard if any part becomes damaged.**

- For best results, inspect Sanding Drum / Mandrel before use, and replace when it becomes worn and smooth.
- Before cleaning and maintenance, ensure the Nail Grinder is **OFF** and remove batteries. Never clean Nail Grinder or replace Sanding Drum / Mandrel with motor on.
- Plastic housing and Safe Guard Cap can be easily wiped clean with a clean, dry cloth.

**NOTE:** Some cleaning agents and solvents can damage plastic parts. Use only a dry cloth when wiping plastic housing. Avoid water.

**CAUTION:** Cleaning and user maintenance should not be made by children.

- Regularly remove the Safe Guard Cap for cleaning and to discard nail filings. Ensure the Nail Grinder is switched to **OFF** and batteries are removed. Pull up on the Safe Guard Cap to remove from the grinder. Empty nail filings and wipe plastic housing with a dry cloth.
- Compressed dry air can also be used to clean debris from the Nail Grinder. Replace the Safe Guard Cap before use, by aligning its openings over the posts on the Nail Grinder, and pressing down firmly.