



# MEMORY FOAM WINDOW PERCH


## ASSEMBLY INSTRUCTIONS

Thank you for your purchase. Follow these step-by-step instructions to properly assemble your Memory Foam Window Perch.

This perch fits best on window sills at least 25 inches wide and at least 3 inches deep. To ensure compatibility, it is recommended to perform a test fit. See steps 1 and 2 of the instructions.

## PARTS LIST

No tools are required. Check that you have all the parts shown BEFORE assembling your product. If any parts are missing, call Customer Service.

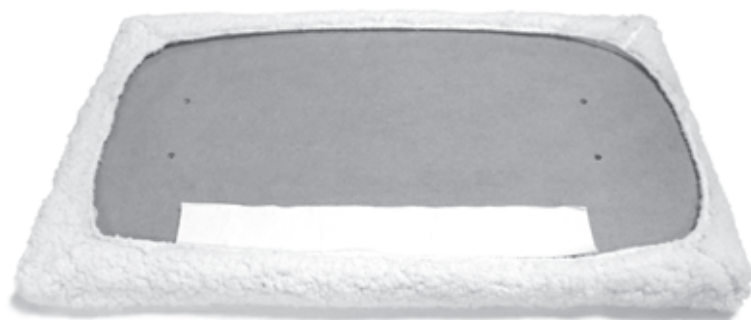

**Platform (Base, sherpa cover and velcro strip)**



**Support Brackets (2)**



**Thumbscrews (4)**

Be a good pet parent, read care guides, books, and research quality care for your pet. Contact a pet professional with any additional care questions.

For questions and inquiries, please contact our customer service line at 1-888-824-7257. For online orders, contact us at 1-877-738-6742, or visit us at [petco.com](http://petco.com).

## ⚠ WARNING

- Read and follow all warnings and instructions in this manual to avoid personal injury to pet or property damage.
- This item is not suitable for children. Keep children away to avoid accidents.
- Inspect product regularly and re-tighten thumbscrews as necessary.
- Always supervise your pet when using this item.
- Inspect product for damage and discard if any part becomes worn, loose or detached.
- Not recommended for outdoor use.
- Machine wash the cover separately in cold water only. Use only non-chloride bleach if needed. Tumble dry low. Reshape if needed.
- Keep instructions in a safe place for future reference.
- Do not exceed 35 LB weight limit.
- For pet use only.


## ATTACH SUPPORTS BRACKETS

- STEP 1** Place the *Window Perch* on a flat surface so the cover is facing down and the underside is exposed. Position *Support Brackets* over each set of holes and insert the *Thumbscrews*. Tighten each *Thumbscrew* so the *Support Brackets* are held in place, but can still be adjusted forward and backward.



## TEST FIT THE PERCH

- STEP 2** The paper backer covering the velcro strip adhesive must NOT be removed. Place the *Window Perch* on the window sill in the desired position. Check to make sure the velcro strip does not overhang the edge of the window sill. Then adjust the *Support Brackets* to make sure they will support the *Window Perch* in a level position. If there are any issues with fit, return the perch for a refund. Proceed to next step if no fit issues are discovered.

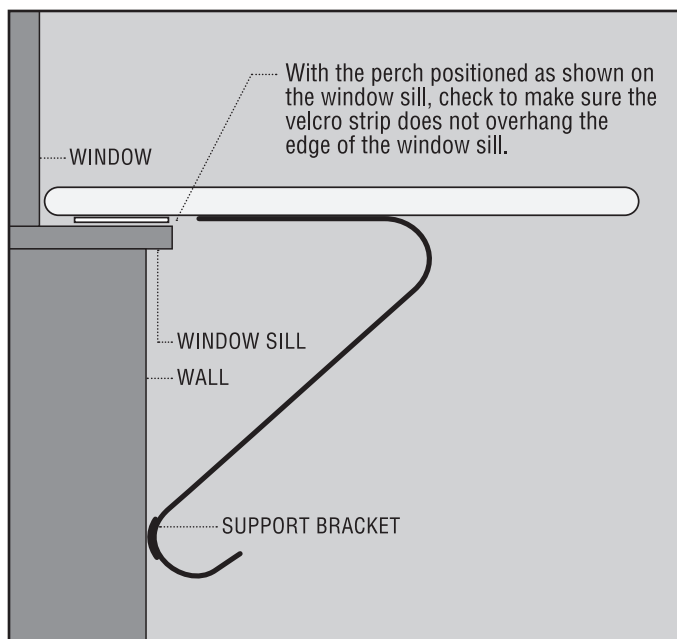

## CLEAN WINDOW SILL

- STEP 3** Check to make sure the windowsill is clean and completely dry. This step is very important to ensure proper bonding of fastening tape.

## APPLY FASTENING TAPE

- STEP 4** With the velcro strip still on the perch, remove the paper backer to expose the adhesive. Very carefully place the *Window Perch* on the windowsill in the same position as when test fitted. Apply firm pressure on the *Window Perch* directly above the velcro to adhere the velcro strip to the windowsill. Then remove the *Window Perch* ensuring the two parts of the velcro separate completely. Apply pressure with your hand to the velcro strip on the windowsill to ensure proper adhesion is obtained. **Allow 24 hours for the adhesive to set up before placing the *Window Perch* back on the windowsill.**

## COMPLETING THE SETUP

- STEP 5** Place the perch back on the windowsill in the same position as when test fitted. Then adjust the *Support Brackets* to make sure they are supporting the *Window Perch* in a level position. Test to make sure the *Window Perch* is solidly mounted before allowing your pet to use it.

